



Dynamic Axle Weighing Operator Sheets

ADD a Permanent Truck ID

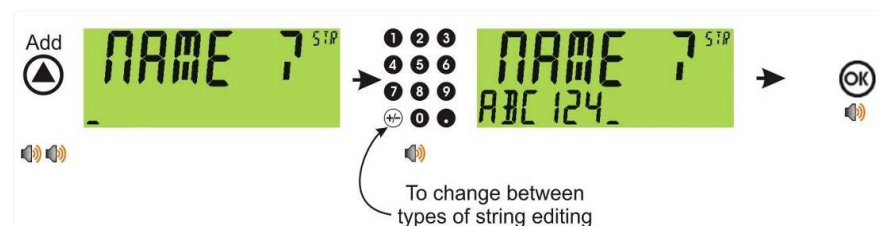


- A long press (hold for 2sec) of the <UP> arrow (**Add**) to create a new **permanent** truck ID.
- The name of the new truck must be specified.
- If a truck exists with that name it will be selected, otherwise a temporary truck with that name will be created.

ADD a Temporary Truck ID

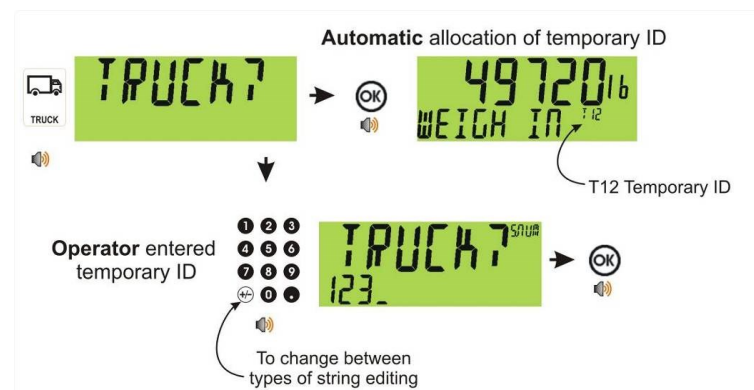


- If a name isn't specified a temporary one is allocated - format TNum (eg. T12).
- A short press of the Truck key to enter a name followed by the <OK> key.
- **A temporary Truck ID is automatically deleted at the end of the weigh out process.**

Select a Stored Truck ID

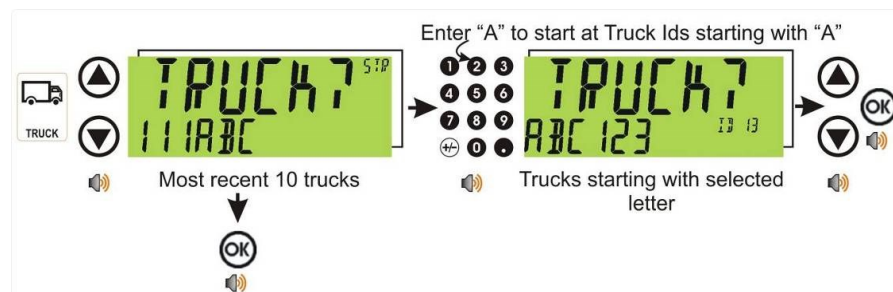

- A short press of <UP> and <DOWN> arrow keys to select a truck from the last ten (10) used.
- To select a stored truck – enter first letter/number of the stored truck name via the keypad.
- <UP> and <DOWN> keys to step through the list of trucks starting with the entered letter.

EDIT a Truck ID - Long Press of the OK Key (Edit)

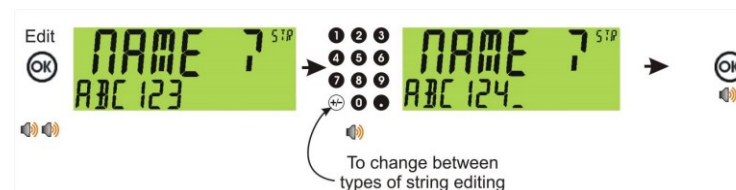


- A long press (hold for 2sec) of the <DOWN> arrow (Del) Key to delete a truck.
- Trucks can only be deleted if the total weight is 0
- Truck totals can be cleared using a long press of the 4 key (Total)

DELETE a Truck ID - Long Press of the Down Key (Del)




Single Pass

Print Current Weight of Truck

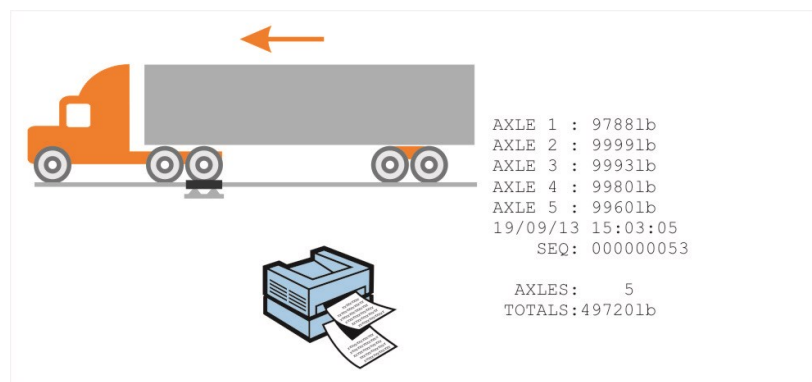


Automatic Temporary ID Allocated with a Preset Tare

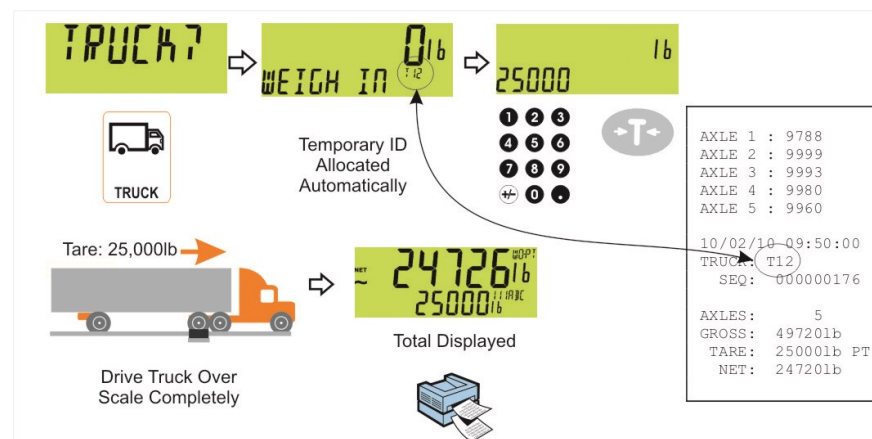


Single Pass

Permanent Truck ID with Preset Tare

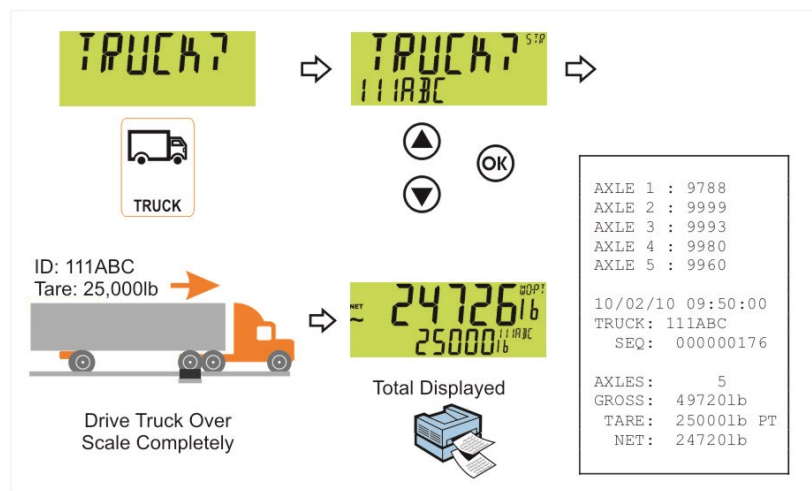


Temporary ID (Operator Entered) with a Preset Tare

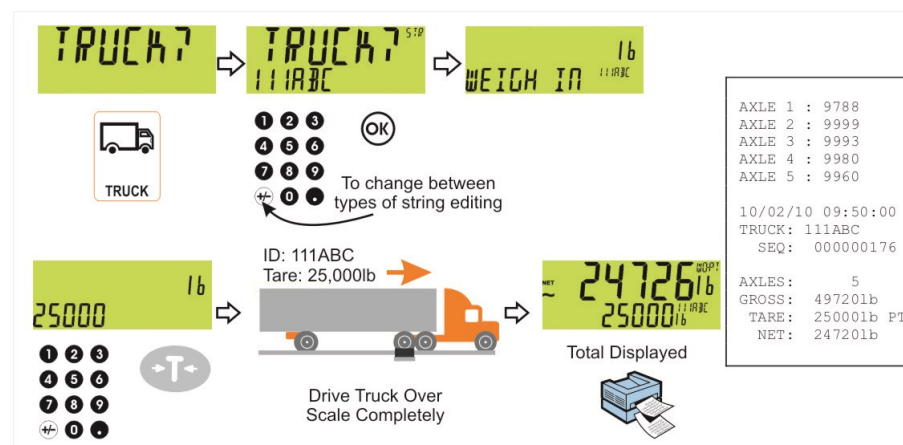

Dynamic Axle Weighing Operator Sheets

Two Pass Weigh In – Weigh Out

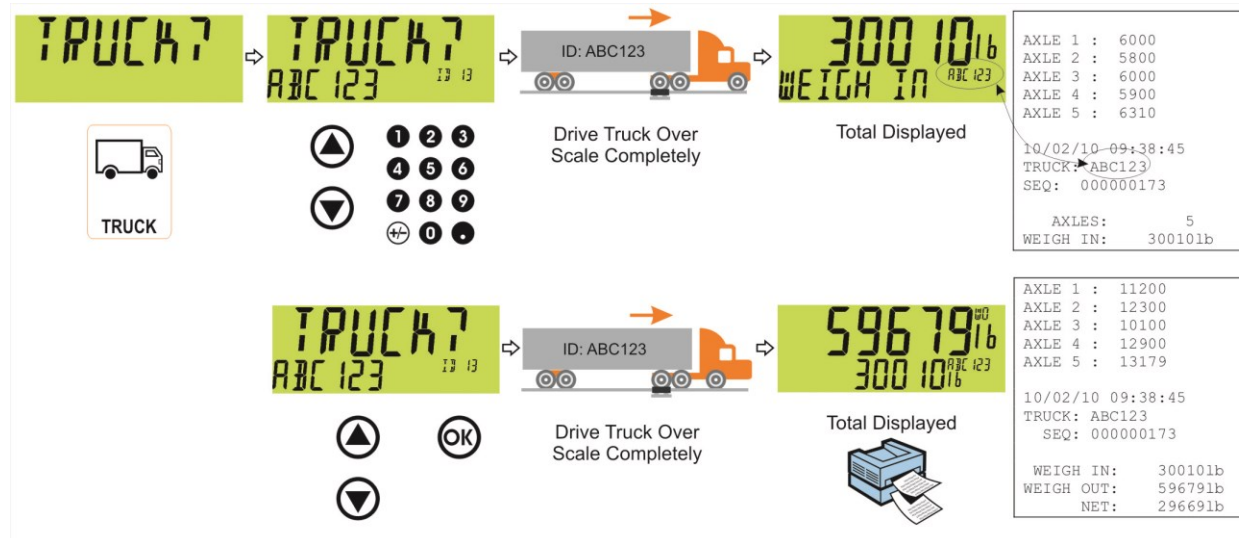

Two Pass Automatic Temporary ID Allocated

